

SHARP MX-3114N 複合機操作說明(影印)


The image shows the control panel of a SHARP MX-3114N copier. The interface is dark with various buttons and indicators. Five red circles with numbers 1 through 5 highlight specific settings:

- 1**: The **影印** (Copy) button at the top left.
- 2**: The **彩色模式** (Color Mode) section, showing **全彩** (Full Color) selected.
- 3**: The **影印倍率** (Copy Magnification) section, showing **100%** selected.
- 4**: The **紙張選擇** (Paper Selection) section, showing **A4 普通紙** (A4 Standard Paper) selected.
- 5**: The **雙面影印** (Double-Sided Copy) button.

Other visible settings and sections include:

- 影印模式按鍵** (Copy Mode Buttons): **彩色模式** (Color Mode) and **濃度選擇** (Density Selection).
- 倍率選擇** (Magnification Selection): **原稿** (Original) and **自動** (Auto).
- 紙匣選擇** (Tray Selection): **紙張選擇** (Paper Selection) and **自動** (Auto).
- 機器碳粉存量** (Machine Toner Levels): **碳粉剩餘量** (Toner Remaining) for Bk, C, M, and Y.
- 雙面列印** (Double-Sided Printing): **雙面影印** (Double-Sided Copy).
- 輸出選擇** (Output Selection): **歸檔** (Folder) and **快速歸檔** (Quick Folder).
- 工作狀態** (Work Status) and **機器狀況** (Machine Status) indicators.
- 維護資訊** (Maintenance Information) section.

SHARP MX-3114N 複合機操作說明(影印)

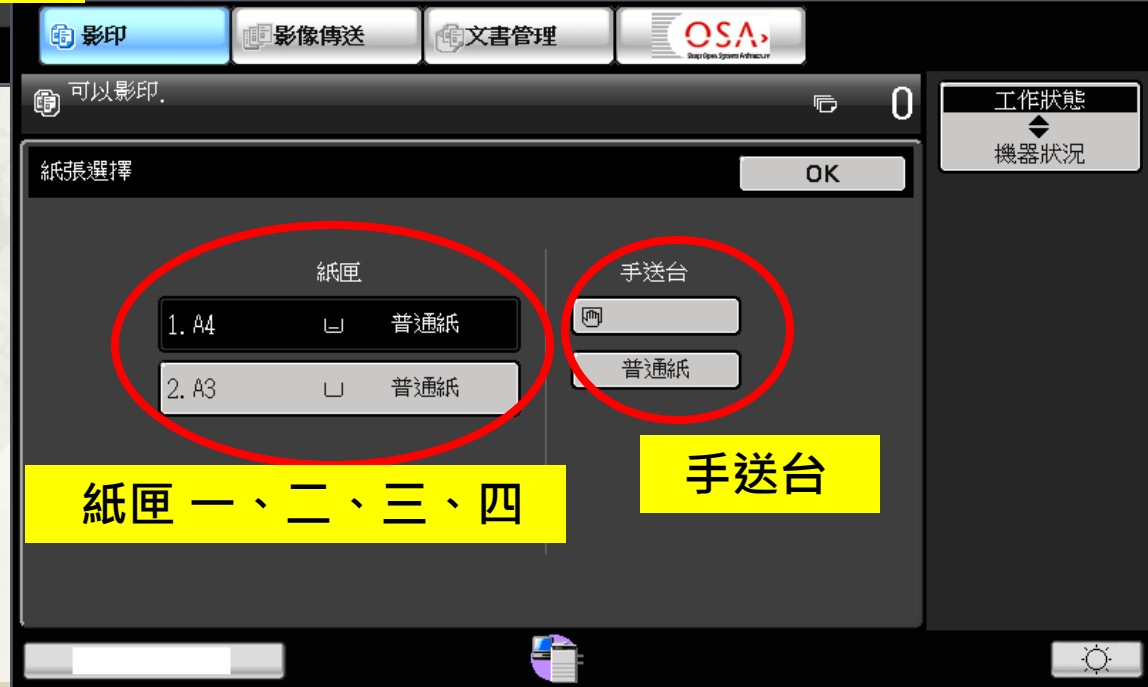

SHARP MX-3114N 複合機操作說明(影印)

5

原稿單面=印出來單面

原稿單面=印出來雙面

原稿雙面=印出來雙面

原稿雙面=印出來單面2張

工作記憶

預先設定好的特殊功能(身分證、多頁合一、等)

SHARP MX-3114N 複合機操作說明(掃描)




1. 選擇影像傳送
2. 位址目錄
3. 選擇“掃描共用區”的清單
4. 特殊選擇：原稿選擇、曝光、解析度、檔案格式、特殊功能

SHARP MX-3114N

複合機操作說明(掃描)


1

原稿選擇

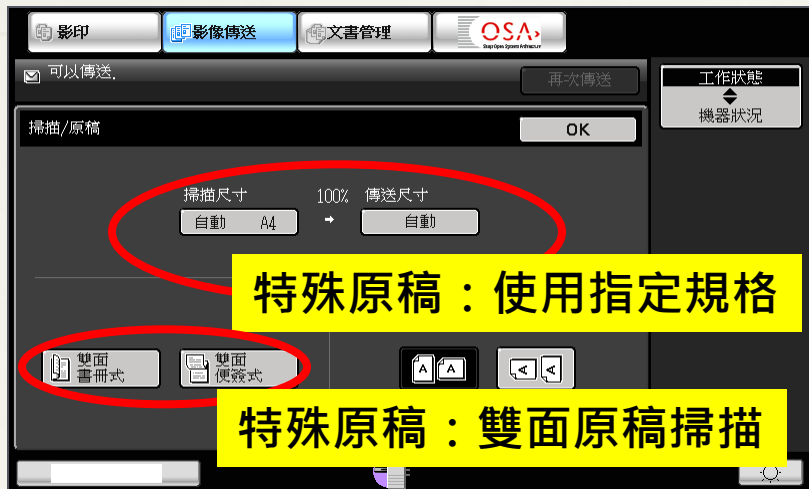

2

濃淡度選擇

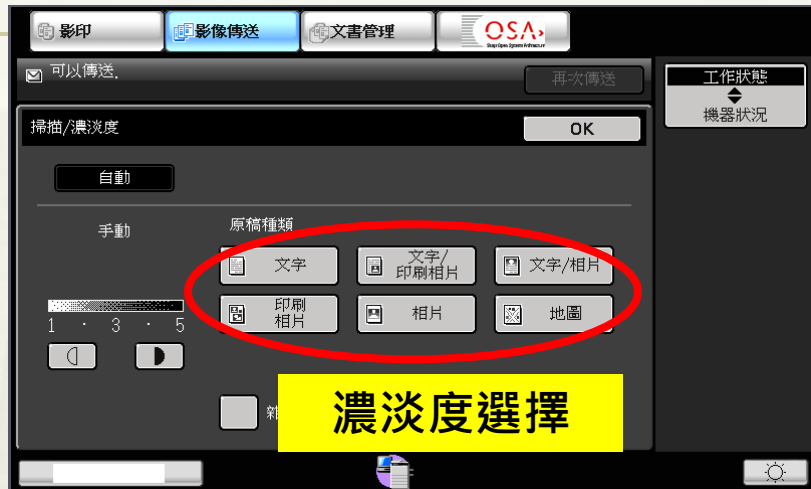

3

解析度選擇



4

檔案格式選擇

